

Instructions to M-CHAT audio for clinicians:

This is an audio recording of the M-CHAT-R. Before beginning the checklist, please make sure that your patient has the following materials: a copy of the M-CHAT-R in English or Spanish (Western Hemisphere*), a pen, and the MP3 player to listen to the M-CHAT-R recording. Once your patient has all these items, please press play to allow them to fill out the form. Collect it when they are done and score the M-CHAT using the usual scoring algorithm (www.mchatscreen.org).

*The Spanish recording is only compatible with the Western Hemisphere Spanish form.

Instructions for using the August pocket stereo and MP3 player:

Power supply

The device has a built-in rechargeable battery which can be charged using the provided USB charging and audio cable. The cable can be used either through a computer's USB port or through a USB adaptor. It takes 4 hours to fully charge the battery. A charged battery will support up to 6 hours of playback.

- To turn the device on, slide the *mode switch* to **TF**. To turn the device off, slide the *mode switch* to **OFF**.

Changing tracks and pausing

- Sliding the *function switch* quickly towards **V+⏮** or **⏭V-** will bring you back to the beginning of the previous track.
- Pressing down on the *function switch* will pause the track. Pressing down on the *function switch* a second time will resume playback.

Volume control

- Sliding the *function switch* (without pressing it down) towards **V+⏮** will raise the volume.
- Sliding the *function switch* (without pressing it down) towards **⏭V-** will lower the volume.
- The device can be used with the built-in speakers or with headphones. Plugging headphones into the socket will automatically mute the speakers.

Micro SD card slot

On the side of the device you will see an area that lights up when the device is turned on, this is the micro SD card slot. The M-CHAT English and Spanish audio files were loaded on a micro SD card and then inserted into the device. This device will only play files that are loaded onto the SD card. Removing the micro SD card, thus removes the audio files from the device.

Visual Diagram of August pocket stereo and MP3 player

